

Garmin Connex (430W)

Connecting & Using the FlightStream 210

FlightStream 210 Overview

Provides GPS Position and Flight Planning



- ▶ Wirelessly receive ADS-B weather, traffic, GPS & AHRS position data from the 430W
- ▶ Any app that speaks the **Garmin Connex** protocol will work with the **FlightStream 210**



Connex Bluetooth Connection



- ▶ Foreflight and Garmin Pilot also support bi-directional flight plan transfer capability between your tablet and the 430W

Connecting your Tablet

1. Use the right big knob to select the **Aux** “chapter” and the right small knob to select the **Connex** “page”
2. Make sure “Bluetooth Status” is highlighted and press ENT
3. On your tablet, go to the Bluetooth Settings page and select the Flight Stream device name (ex: N8237B FS210)



Be sure you don't change the Bluetooth Name!
(Press CLR if you accidentally do)



Connecting your Tablet (Cont)

4. On the 430W, press ENT to pair the devices when prompted

- ▶ You may also need to accept the pairing on your tablet

5. After pairing, your tablet will show up in the Paired Devices section

- ▶ A solid square means the device is paired and connected
- ▶ An empty square means the device is paired but not connected



Auto-Reconnect


- ▶ By default, the FS210 will automatically connect to your tablet once it has been paired.
- ▶ **To disable, follow these steps**
 1. Go to Aux-Connex, select Bluetooth Status, and press ENT
 2. Press the small right knob and then turn the big right knob to select the desired device and press ENT
 3. Press MENU, then highlight “Disable Auto-Reconnect?” and press ENT.



Unpairing a device


▶ If you are having trouble pairing, you may need to delete a paired device to make room for yours

1. Go to Aux->Connex, select Bluetooth Status, and press ENT
2. Press the small right knob and then turn the big right knob to select the desired device
3. Press CLR and confirm you want to unpair it by pressing ENT

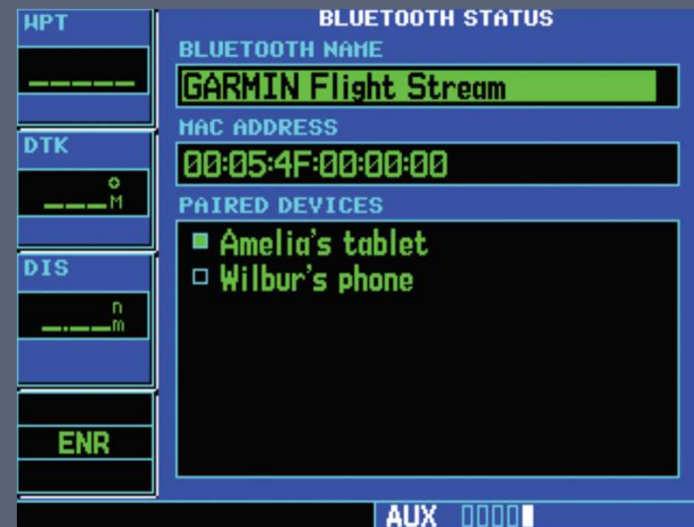

Importing a Flight Plan

- ▶ The 430W is treated as the “master”, so you need to manually accept the flight plan after sending it from your tablet.
 1. A message will appear when a flight plan has been sent using Connex.
 - ▶ Press MSG if you want to view the message.
 2. Press FPL to go to the Connex Flight Plan Import page.

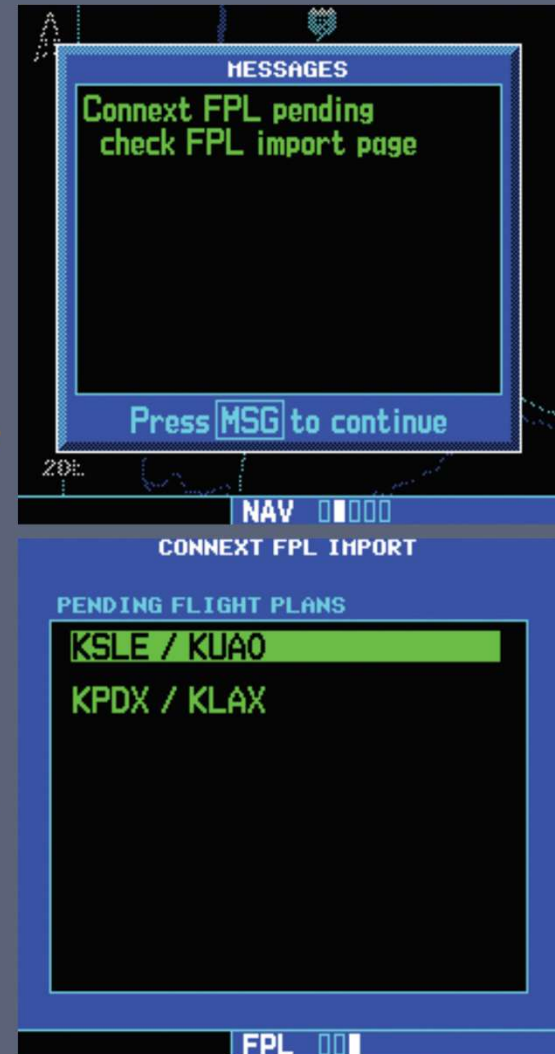

Importing a Flight Plan (Cont)

- ▶ You can either *load and activate the transferred flight plan*, or *save it for later use*.
- 3. Press the small right knob to activate the cursor, and turn the small right knob to select the desired flight plan.
- 4. Press ENT to preview the flight plan.
- 5. Use the large right knob to select “Activate?” or “Store?”, and press ENT to accept.

CONNEXT FPL IMPORT

PENDING FLIGHT PLANS

KSLE / KUAO

KPDX / KLAX

FPL 001

FLIGHT PLAN PREVIEW

Activate? Store? Scroll

HAYPOINT	DTK	DIS	CUH
Enroute			
KSLE			
KMMV	326° _M	18.0 _m ⁿ	18.0 _m ⁿ
Approach LOC 17			
BTG IA	019° _M	40.4 _m ⁿ	58.4 _m ⁿ
D13.8	181° _M	13.8 _m ⁿ	

FPL 001

